



Local Indicator/ Key Functions

Key Name	Symbol	Descriptions
Up Key	⬆	In the parameter setting, press this key can move the cursor left.
Down key	⬇	In the parameter setting, press this key can increase the digits.
Combination Key	⬆⬇	1. In the measuring status, press this key can enter to parameter pages. 2. In the parameter setting, press this key can save the value & goto next page.

** 1. The following block charts are parameter codes, parameters codes & parameters will alternate flashing if the parameters can be modified.
2. To modify the parameters, please ⬆ or ⬇ and press ⬆ & ⬇ to save the parameters after the modification.

GENERAL MODE OPERATING PROCEDURES

Power On	Display	Descriptions	
1000	Measuring status	Present value for measurement	0000
SELS	Display low scale Setting	Press ⬆⬇ to modify display low scale for input signal zero value. If the input signal is 4~20mA; 4mA is show display 0.00 this parameter must be set for 000.00	
SELS	Display Hi scale Setting	Press ⬆⬇ to modify display high scale for the input signal span value. If the input signal is 4~20mA; 20mA is show display 100.00, this parameter must be set 100.00	
dot	Decimal Point Setting	Press ⬆⬇ to select decimal point (0, 1, 2, 3, 4)..	0000
dAP	Display average Setting	Press ⬆⬇ to modify display average (0~20s).	0000
HiLo	Alarm functions Setting	Press ⬆⬇ to select the alarm function (ON or OFF).	on
SEPL	Alarm 1 Percentage Setpoint	Press ⬆⬇ to modify alarm 1 percentage setpoint (0~100%)	0000
SEPH	Alarm 2 Percentage Setpoint	Press ⬆⬇ to modify alarm 2 percentage setpoint (0~100%)	0000
Ld Ir	Alarm 1 Action Setting	Press ⬆⬇ to modify alarm 1 , value that is ≥(Hi) or <(Lo) for alarm functions	UP
Hd Ir	Alarm 2 Action Setting	Press ⬆⬇ to modify alarm 2 , value that is ≥(Hi) or <(Lo) for alarm functions	dn
dELA	Alarm run Delay Setting	Press ⬆⬇ to modify the value, when the display value reach the alarm value that need to wait for this time (0~30 sec) for alarm action.	0000